Rear Flip Seat Kit & Frame Only Kit

Installation Instructions for
E-Z-GO® RXV®

INCLUDED:

**Cushions not included in Frame Only Kits*

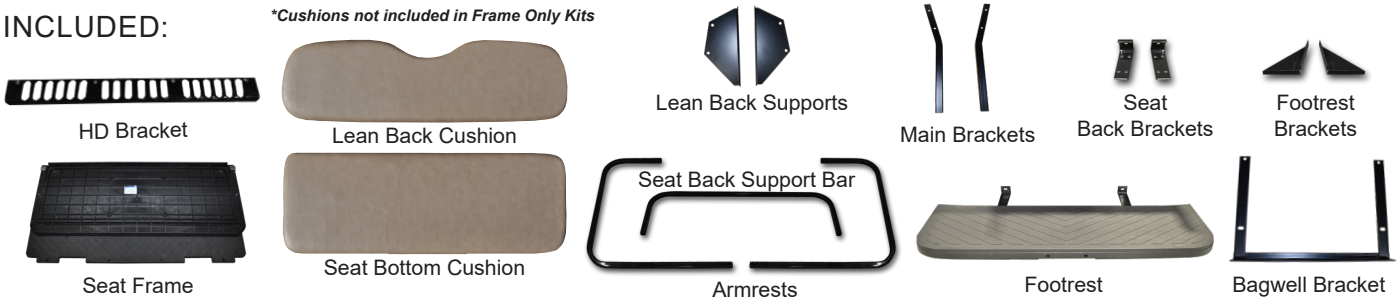

Note: This kit is designed to work with old and new model RXV body styles. The following steps are identical for all year models.

1

Engage the Parking Brake and turn the key switch to the OFF position.

Remove factory canopy, rear struts, seat back, seat bottom, and motor cover. Retain all for rear installation.

2

Tool Required: 15mm Socket & Wrench

Attach **Main Brackets** with factory boot cover to frame as shown on both sides using hardware retained from Step 1.

**Brackets should angle toward rear of cart.*

3

Using the factory strut bolts from Step 1, attach the **Lean Back Supports** to the **Main Brackets**.

Do **NOT** secure with lock nut until after Step 4.

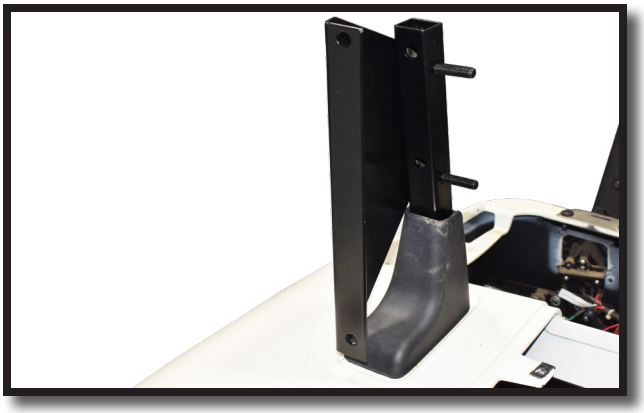

4

15mm Socket & Wrench

Attach factory rear struts to the **Main Brackets & Lean Back Supports** using retained hardware from Step 1. Tighten hardware.

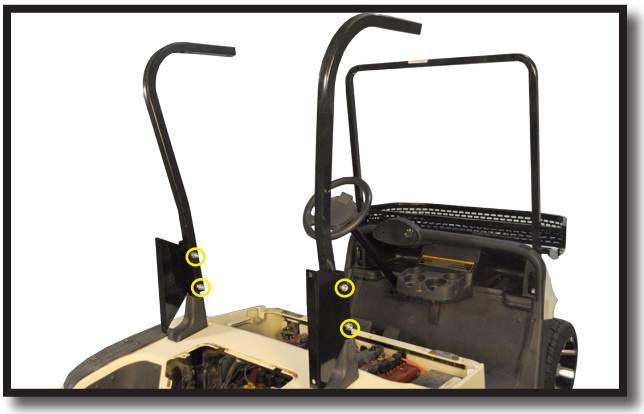

5

T27 Torx Socket

Replace front seat bottom and reattach motor cover using hardware retained from Step 1.

6

T45 Torx Socket

Remove outermost factory bolts in bagwell and attach **Bagwell Bracket** using same hardware. Be sure the lip of the bagwell brackets faces towards the inside of the cart as shown. Tighten hardware.

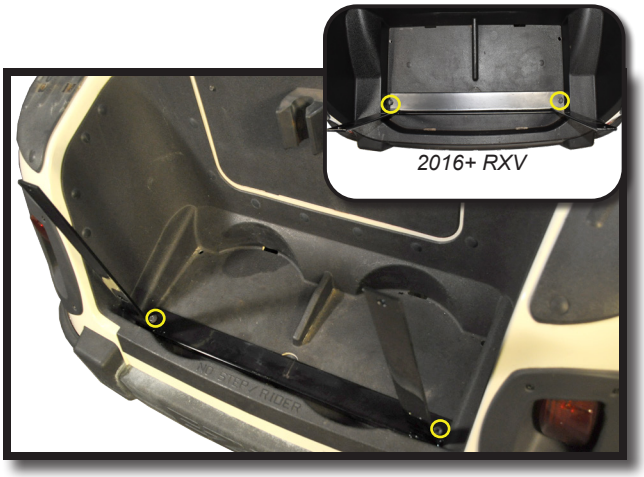

7

17mm Socket & Wrench

Place **Seat Frame** on rear of cart and secure to the **Bagwell Bracket** using the 10x25mm hardware from Pack 1.

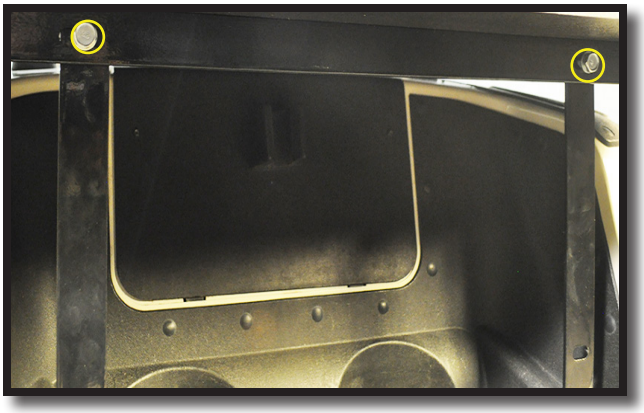

8

17mm Socket & Wrench

Attach **Seat Frame** to **Main Brackets** using remaining hardware from Pack 1. Tighten hardware.

IMPORTANT: Do not tighten hardware until Step 14 is complete.

9

#3 Phillips Tip, 17mm Socket & Wrench

Place **Seat Back Support Bar** in rear of **Seat Frame as shown**.

A) Using 10x70mm bolts and Rubber Spacers from Pack 2, attach the **Arm Rests** to the rear of the **Seat Frame** and **Seat Back Support Bar**.

B) Attach **Armrests** to the front of **Seat Frame** using the 10x45mm Countersunk bolts from Pack 2. Acorn Nuts should be on the outside of the cart as shown below.

C) Secure the **Seat Back Support Bar** to the **Lean Back Brackets** using the 10x45mm hardware from Pack 2.

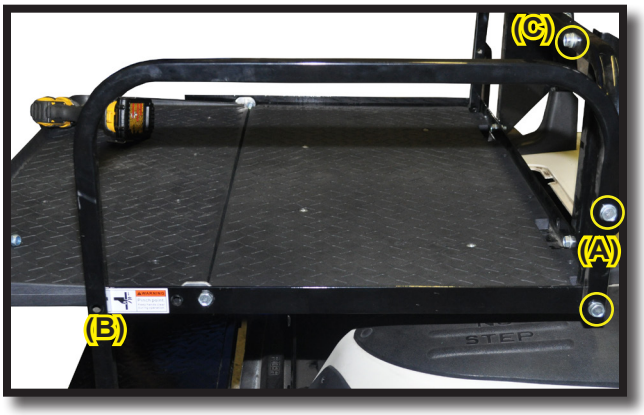

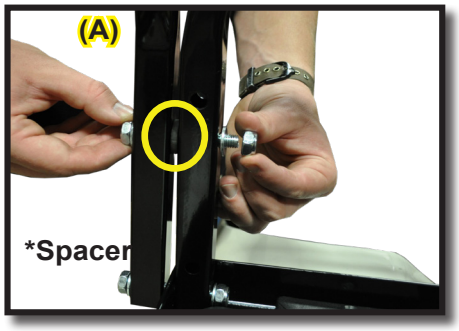

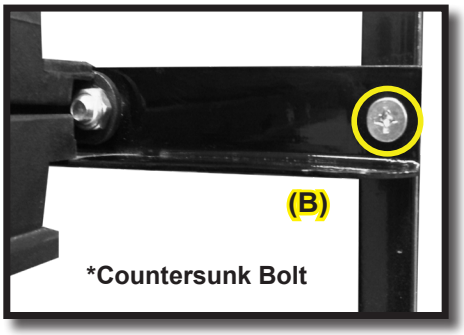

17mm Socket & Wrench

A) Attach **Footrest** to the **Bagwell Bracket** using the 10x25mm bolts from Pack 3.

B) Attach **Footrest** to the **Armrests** and **Footrest Brackets** using the 10x70mm bolts from Pack 3.

Note: You can now fully tighten all seat kit hardware.

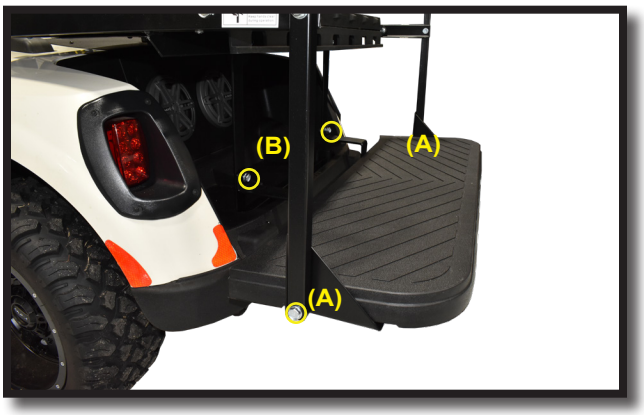

T45 Torx Socket

Attach front seat back to Main Brackets using retained hardware from Step 1.

10mm Socket

Attach **Seat Back Brackets** to rear **Seat Lean Back Cushion** using 6mm bolts, lock washers, & flat washers from Pack 4.

17mm Socket & Wrench

Attach **Rear Lean Back Cushion** to **Seat Back Support Bar** using hardware from Pack 4, tighten hardware.

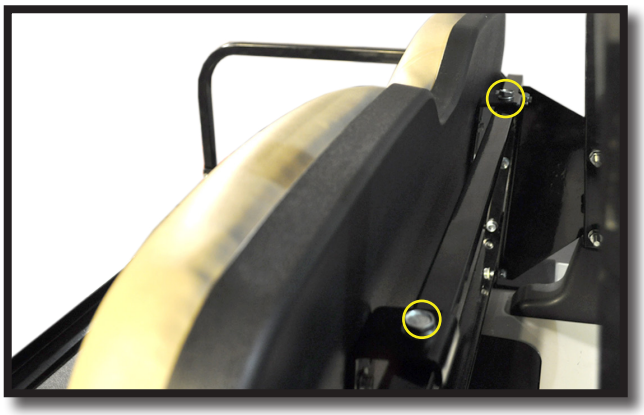

#3 Phillips Tip

1. Place **HD Bracket** on flip seat as shown. Align bracket holes to the flip seat mounting holes. Insert Nylon seat strap between HD Bracket and flip frame at desired location.

2. Make sure the thickest part of the seat bottom is towards the rear. Center seat bottom from left to right on flip frame.

Press cushion firmly against HD Bracket and seat frame. Using countersunk bolts from Pack 5, tighten the seat bottom to seat frame as shown.

*Cover bolt holes using supplied Plastic Caps from Pack 5.

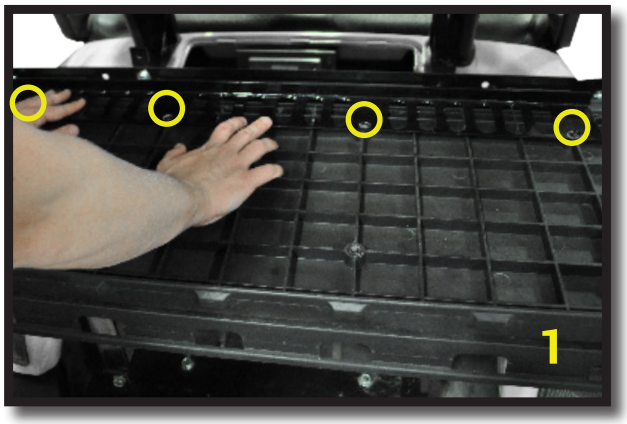

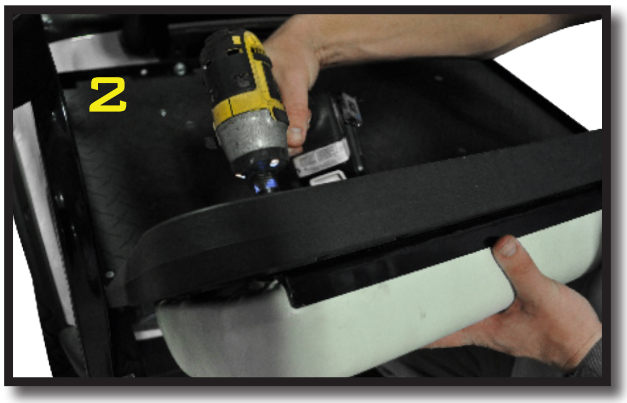

INSTALLATION COMPLETE

HARDWARE PACK

Pack 1
4 - 10x25mm Hex Bolt
8 - 10x20mm Flat Washer
4 - 10mm Nylock Nut

Pack 2
2 - 10x45mm Hex Bolt
4 - 10x70mm Hex Bolt
2 - 10x45mm Countersunk Bolt
14 - 10x20mm Flat Washer
8 - 10mm Nylock Nut
2 - Rubber Spacer

Pack 3
2 - 10x70mm Hex Bolt
2 - 10x25mm Hex Bolt
8 - 10x20mm Flat Washer
4 - 10mm Nylock Nut

Pack 4
2 - 10x45mm Hex Bolt
4 - 10mm Flat Washer
2 - 10mm Nylock Nut
4 - 6x20mm Hex Bolt
4 - 6mm Lock Washer
4 - 6x17mm Flat Washer

Pack 5
8 - 8x30mm Countersunk Bolt
1 - Nylon Strap
8 - Plastic Caps

E-Z-GO®, TXT®, and RXV® are registered trademarks of Textron Innovations, Inc. (“Textron”). Reference to Textron’s trademarks and products is only for purposes of identifying golf carts with which this GTW product is compatible. GTW products are aftermarket parts and are not original equipment parts. GTW is not connected or affiliated with or sponsored by Textron® or E-Z-GO®.